SPARE PARTS LIST

Children's Electric Ride On Car

Installation And Operation Manual

Age Range:37-95 Month Maximum Weight: 35 KGS

Model: VOLVO XC90

Execution Standard:

GB6675& GB18865

EN71& EN62115

ASTM F963





2.Install steering wheel

Due to the reason of movement of steering tube, sometimes there is possibility that the hole on the steering wheel and the hole on the steering tube can not match well. If this happens, please use one hand to hold the hook under the car body in order to fix the steering tube. (Referring to the picture) (This means when installing steering wheel, s ometimes parents may not aim properly to the hole or not match them well. If so, parents need to us their hand to hold the hook which is under the car body to help to fix).



According to the picture





Firstly,take out the and insert into the seat .. Take out of the lines and connect terminals accordingly**





4. Install rear view mirror

Align the rearview mirror with the car slot and push until full into place(according the photo) Attention: Installation must be done by adults









Firstly insert the sleeves into the wheels, and then push the wheels into the car. After hearing the voice of click, you can check the wheels are installed well or no.Push the button directly if you want to dismantle the wheels from the car.

of the wheels, insert the wheels into front axle and fix them; press the center button of the wheels to pull out the wheels from the axle so as to remove the wheels



1.Get the sleeves out from the screws&bolts bag and insert both inside and outside of front wheels. and outside of back wheels.

2.Insert one metal gasket into the axle.

 
3.Put the wheels into the axle.

4.Insert the cotter pin into the hole of axle and make it as cross.


5. Put the wheel cover onto the wheel Please referring to the photos above.



This is a Child's Toy and NOT intended for Off-Road Use



 When the wheels are installed, press the center button







Specifications

Item	Specifications
Battery	12V7AH/12V10AH
Motor	35W
Available Ages	Children from 37-95 month
Maximum Weight	35KGS
Size	129*76*63cm
Speed	3-6km/h
Charging Time	8-12hours
Remote Control Batteries	2PCS of AA Batteries
Charger	Input:220V/110V Output:DC12v1000MA

CHARGING PRECAUTIONS

Battery polarity cannot be reversed, please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal

- •Press the power switch to OFF position to turn the power off. •Open the seat, connect the battery plug, red to red.
- •Never drain battery completely or to a crawling speed.recharge the battery when a decrease in speed and power is noticed. Warrantywill be voided if misuse has occurred.
- Battery charging must be done by adults only. Never allow children to charge the battery. A child could be injured by the electricity involved in charging the battery.
- Please don't connect the wires to a short circuit. The charger and the battery are not a toy.Do not allow children to play with the charger and the battery. Only operate the battery and charger specified according to the manual instructions. Please do not open the battery and the charger.
- •To maintain safety of vehicle, always secure the battery with the bracket.
- •The battery must be handled and operated by adults only: the battery is heavy and contains sulfuric acid(electrolyte). Dropping the battery could result in serious injury
- •Before charging the battery check for wear or damage to the battery, charger, the connectors and other parts. If any damage found, the charger should be repaired or replaced immediately .Do not use a damaged charger.

•It is normal for the adaptor to feel warm during charging, but if the charger feels too hot, stop charging immediately and check the battery and adaptor. When charging please turn off the power switch. Please charge the battery for 8-10 hours after first use. Subsequent charges should be 6-8 hours but not exceeding 10 hours. If do not use the car for a long time, please charge at least once a month to keep the battery cells active.

1.Plug the charger into the charging socket.

2.Plug the other end of the charger into your wall socket. Batteries are perishable items that are subject to under and over charging. Please observe the charging time.


TROUBLESHOOTING

Problem: The car will not move

Answer 1: The battery is low, please charge for 6-8 hours but not exceeding 10 hours.

Charge at least once a month to keep the battery cells active. Answer 2: The battery is low. Please charge the battery for 6-8 hours but not exceeding 10 hours.

 Charge at least once a month to keep battery cells active.



- To avoid short fuse or power cut off:
- 1. Do not overload the product. Max load is 35Kg.
- 2. Do not drag any item behind this product.
- 3. Do not allow water or any liquid into electric parts.
- 4. Do not change wire system without a professional.

TROUBLESHOOTING

Problem: The car only runs for a short time

Answer 1: The battery is low, please charge for 6-8 hours but not exceeding 10 hours.

Charge at least once a month to keep the battery cells active Answer 2: The battery may need to be replaced depending on its charging history and age.

Problem: The sound does not work.

Please ensure the volume is turned up and the MP3 line is not connected. Sounds from steering wheel will not work when MP3 is plugged in.

Problem: Charger overheating

It is normal for battery and charger to be slightly warm during charging If the charger feel excessively hot, please check for a current overload or battery short circuit.

SAFETY PRECAUTIONS

- 01. While driving, adult supervision is required all the time
- 02. Always wear a helmet when driving
- 03. Please don't drive near road or on the footpath.
- 04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
- 05. It is recommended to drive this vehicle on smooth surface only.
- 06. Please don't drive this vehicle outdoors when it is raining.
- 07. Make sure that the vehicle stop completely before changing direction from forward to reverse
- 08. Please don't allow children to operate the charger or play with the battery
- 09. Clean the vehicle with a dry cloth only.
- 10. Please follow the correct weight and age limits allowed to drive this vehicle.
- 11. It is prohibited to change the circuit or add other electric parts.
- 12. Adults must teach their children about safe driving procedures.
- 13. Please turn the power off when not in use.
- 14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
- 15. Inspect all wires and connection of the vehicle periodically.
- 16. Charging the battery should only be done by adults.
- 17. Charging plug is located underneath the seat.
- 18. In order to avoid accidents, please ensure the vehicle is safe before driving.
- 19. Please don't let children touch the wheels or be near them when the car is moving.
- 20. Please mind fingers when opening and closing doors.

USING INSTRUCTION



6.Low/High speed

13.Speaker 8.Story/v-11.Education 9.Music/v+ 12.Mooe

1. Press the music button on the steering wheel for horn or music. 2.Plug in your MP3 device to play your own music through the car Please note the steering wheel sounds will not work when the MP3 device is connected.

Please note the steering wheel sounds wheel not work when the MP3

lead is connected

Operation Guide



For first time use or after replacing the battery, select not to pair. The car will power on after turning the ignition key.

If you choose to pair the remote control with the car, please follow the instructions below.

Step1. Insert two AAA 1.5V batteries into the battery compartment of the remote control. Ensure the battery polarity is matched correctly. If the frequency lights flashes then the battery is correctly installed.

Step 2: Hold the Car Select button for 2-3 seconds. Step 3: Turn on the ignition key to turn on the car.

*Manufactured according to FCC certification testing and FCM credential

*This remote is to be used by adult only.

Warning-When replacing a replaceable battery, first openthe lid and take out the old battery.Put in the new battery.pay attention to the positive and negative poles, cover the lid.

For safety reasons,

*please use this vehicle under adult guidance and supervision.

*do not use this product on main roads, slopes. highways or other dangerous places.

*children must wear shoes and protective gears when operating the vehicle.

 
*children should be seated with the seat belt fasten when driving.

*only load a maximum of 35Kg on the vehicle. *only children aged 37 - 95 months should be allowed on this vehicle.

*use this toy strictly according to safety manual. *please check the tires, breaks, steering wheels, seats and seat belts before operating vehicle. *this toy vehicle should be used with caution and

requires skill to avoid fall or collision with third parties.

Pictures are for reference only, please adhere to the original products as standard





info@ruller.no info@rull.fi

Nordbutiker AB Gösvägen 28, 76141 Norrtälje, Sweden

3.TF interface