



Electric Scooter

User Manual Model No.: M8

EN

	SAFETY REMINDER-----01-02		HOW TO RIDE-----08
	PRODUCT OVERVIEW-----03		RIDING NOTICE -----09
	SPECIFICATIONS-----04		DAILY CARE AND MAINTENANCE-----10-11
	E-SCOOTER INSTRUCTION----05-06		QUESTION & ANSWER-----12-13
	ELECTRIC DISPLAY -----07		

SAFETY REMINDER



△WARNING

Wear helmets and knee pads in case of falls and injuries when you learn to ride the scooter.

The electric scooter is a leisure device. But once they're in a public area, they'll be seen as vehicles, subjecting to any risks faced by vehicles. For your safety, please follow instructions in the manual and traffic laws and regulations set forth by government and regulatory agencies.

- At the same time, you should understand that risks cannot be entirely avoided as others may violate traffic regulations and drive incautiously, and you're exposed to road accidents just as when you're walking or biking. The faster the scooter is, the longer it takes to stop. On a smooth surface, the scooter may slip, lose balance, and even result in a fall. Thus it is crucial that you use caution, keep proper speed and distance, especially so when you're unfamiliar with the place.

01



SAFETY REMINDER

● Respect pedestrians' Right of Way. Try not to startle them while driving, especially children. When you ride from behind pedestrians, ring your bell to give them a heads-up and slow your scooter to pass from their left (applicable to countries where vehicles drive on the right). When you ride across pedestrians, keep to the right at a low speed. When you drive across pedestrians, keep the lowest speed or getting off the vehicle.

● Closely follow the safety instructions in the manual. Seller shall not be liable for any financial losses, physical injuries, accidents, legal disputes and other interest conflicts resulted from actions that violate user instructions.

● Do not lend your scooter to whoever doesn't know the operations. And when you do lend it to your friends, please take the responsibility to ensure he/she knows the operation and wears the safety gear.


● Check the scooter before every use. When you note loosen parts, low battery alerts, excessive wear, strange sounds, malfunctions and other abnormal conditions, stop riding.

02

PRODUCT OVERVIEW



- 1.LED display
- 2.Power on/off
- 3.Right Handle
- 4.Accelerator/Throttle
- 5.Left handle
- 6.Electric brake
- 7.Level bar
- 8.Folding spanner
- 9.Folding bar
- 10.Front Fender
- 11.Reflective Sticker
- 12.Anti-Slip Pedal
- 13.Front wheel
- 14.Tail lights
- 15.Reflective Sticker
- 16.Rear Fender Brake
- 17.Motor

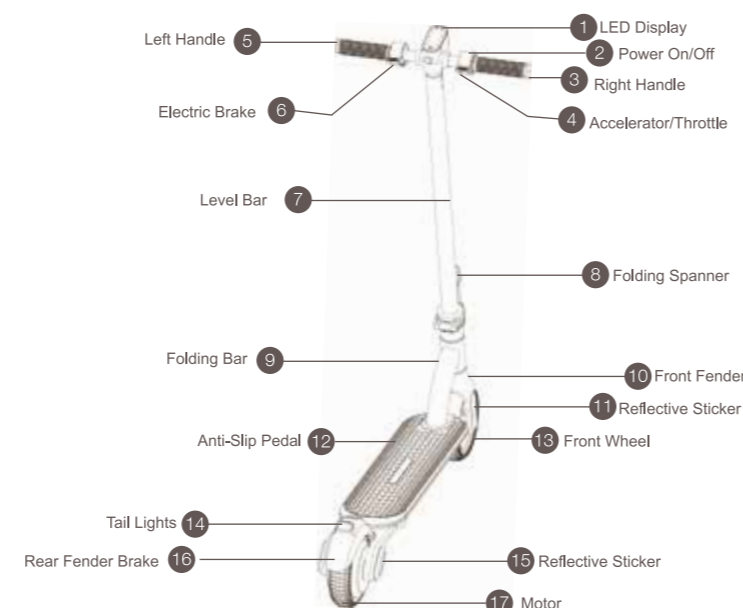

03



SPECIFICATIONS

Motor	250W
Battery	36V/5.0Ah
Charging time	4-6H
Display	LED
Frame Material	Aluminum alloy + ABS + PC
Tires	Rubber Tubeless
Wheel Size	6.5inch
Climbing Degree	15°
Riding Modes	Beginner Mode: 12km/h Normal Mode: 20km/h
Double Braking System	Front: Electric brake Rear: Disc brake
Voltage	36V
Load Range	55-220 lbs (25-100kg)
Age	16-50
Dimensions	37.8"5.9"43.3inch(96"15"110cm)
Dimensions (After folding)	37.8"5.9"16.1inch(96"14"41)

04

PACKAGE CONTENTS



Carefully check package contents, you can find all of them in the packing box

- 1*scooter
- 4* M5x8 screws
- 1* user manual
- 1* 2function screw driver
- 1*charger adapter



How to assembly

1:Unfold the scooter , press the buckle when you heard a click . ensure the buckle in right position
Second step, connect the communication line , one is in the handassembly , one is in lever bar . Third step :assembly the handlebar , take out the screws, use the screw driver fixed

05

E-SCOOTER INSTRUCTION




Note :Do not keep your feet on the rear mudguard.

1. To turn on/off the power: press the power button for 3 seconds.
2. To accelerate: When the scooter starts to coast, put both feet on the deck and press the accelerator.
3. To brake: Release the accelerator and squeeze the brake lever for a sudden brake.
4. To switch different speeds modes by tabbing power button
Beginner mode: 12km/h
Normal mode: 20km/h
5. To turn on/off the Headlights: Double tab the power button.
6. To switch (KM/H) & (Mph): Treble tab the power button.
7. Cruise Control: Keep current speed for 6 seconds to activate the cruise mode. To deactivate the cruise mode by pressing accelerator again or brake.

06



E-SCOOTER INSTRUCTION

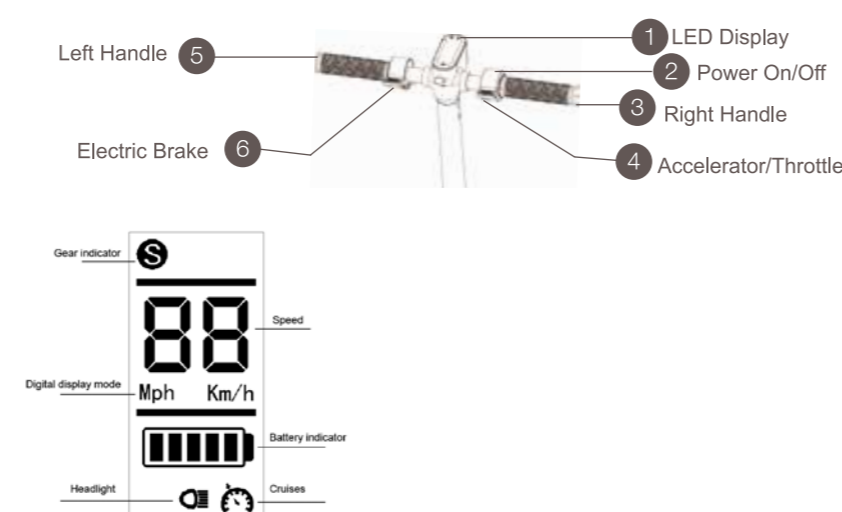

07



HOW TO RIDE

Before riding: Wear helmets and knee pads in case of falls and injuries when you learn to ride the scooter.

- Turn on the scooter, and check the power indicator.
- Step on the deck with one foot, and slowly kicks off the other on the ground.
- When the scooter starts to coast, put both feet on the deck and press the accelerator.
- Release the accelerator and squeeze the brake lever for a sudden brake.
- Tilt your body to the steering direction as you turn, and slowly turn the handlebar.

08

RIDING NOTICE



- Do not ride in the rain.
- Look out for doors, elevators and other overhead obstacles.
- Do not accelerate when you go downhill.
- Do not press the accelerator when you're walking alongside the scooter
- Always steer clear of obstacles.
- Do not hang bags or other heavy stuff on the handlebar.
- Keep both feet on the deck all time.
- Keep your speed between 3.1-6.2 mph when you ride through speed bumps, elevator door sills, bumpy roads or other uneven surfaces. Slightly bend your knee to better adjust mentioned surfaces.
- Do not ride in traffic lanes or residential areas where vehicles and pedestrians are both allowed
- Do not turn the handlebar violently during high-speed riding
- Do not ride in a ponding that is higher than 0.78 inches
- Do not ride with anyone else, including children

09



DAILY CARE AND MAINTENANCE

Cleaning and storage

If you see stains on the scooter's body, wipe them off with a damp cloth. If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth. Notes: do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to prevent dire damage. Do not wash the board with a high-pressure water spray. During cleaning, make sure that the scooter's turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems. When the scooter not in use, keep it indoors where it is dry and cool. Do not put it outdoors for long time. Excessive sunlight, overheating and overcooling accelerate the battery pack's lifespan.

Battery maintenance

1. Use original battery packs, use of other models or brands may bring about safety issues.
2. Do not touch the contacts. Do not dismantle or puncture the casing. Keep the contacts away from metal objects to prevent short circuit which may result in battery damage or even injuries and deaths.
3. Use original power adapter to avoid potential damage or fire.

10

DAILY CARE AND MAINTENANCE



4. Mishandling of used batteries may do tremendous harm to the environment. To protect natural environment, please follow local regulations to properly dispose used batteries.
5. After every use, fully charge the battery to prolong its lifespan.

Store

1. Please try to store the scooter in a cool and dry place between 14°F and 104°F. extremely humid environments the interior of the scooter may suffer condensation or even water accumulation, which may damage the battery rapidly.
2. In daily use, try to avoid recharging the scooter after completely exhausting the battery. If the battery is low, charge it as soon as possible.
3. Please charge the scooter every other month to preserve the battery.

11